# Getting Started with the TS8388B 8-bit 1 Gsps ADC and the TS81102G0 1:4/8 DMUX


# Introduction

The aim of this application note is to help the user set up a test bench using Atmel's TS8388B 8-bit 1 Gsps ADC and TS81102G0 1:4/8 DMUX evaluation boards. It first gives a description of the test bench used in Atmel's laboratory, provides recommendations on how to connect all the components together and finally describes in detail the test procedure that should be followed to rapidly evaluate Atmel broadband data conversion devices.




TS8388B and TS81102G0 Evaluation Boards

# Application Note

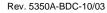



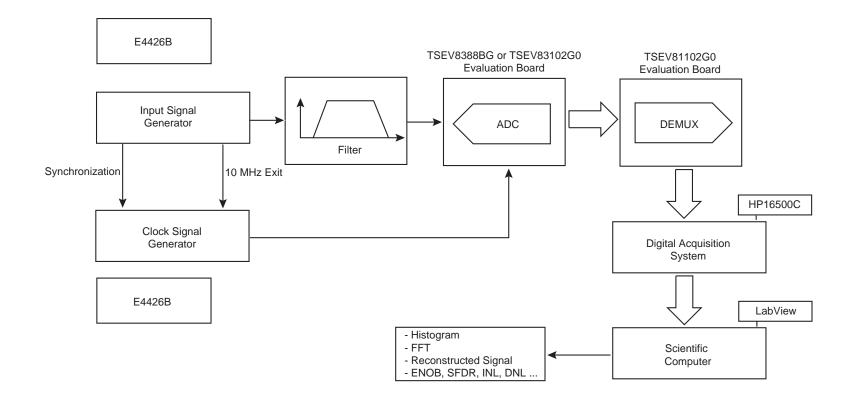


# Interfacing the ADC and DMUX Evaluation Boards

#### **Settings**

In Figures 2 and 3, there is an offset between the ADC output connector and the DMUX input connector.

TSEV8388BF/FZA2 Evaluation Boards (ADC in CQFP Package)

Figure 2. Evaluation Boards (ADC in CQFP Package)

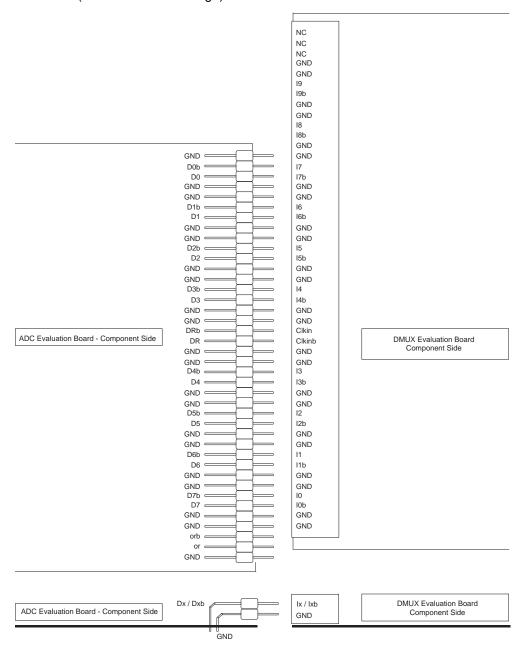

Note: In this configuration, the MSB on the DMUX is bit 0. Ensure the boards are connected as illustrated above, otherwise the ADC or the DMUX may be damaged by forcing a signal to ground, for example.






#### TSEV8388BGL/GLZA2 Evaluation Boards (ADC in CBGA Package)

4


Figure 3. Evaluation Boards (ADC in CBGA Package)

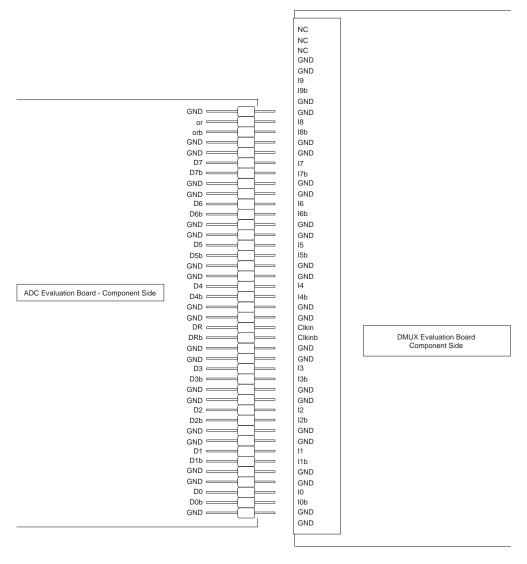


Note: Ensure the boards are connected as illustrated above, otherwise damage to the ADC or the DMUX can occur by forcing a signal to ground, for example.

TSEV8388BGL/F ADC Evaluation Boards without Digital Output Buffers Since both the ADC data outputs are on-board 50  $\Omega$  differentially terminated and the DMUX input buffers are on-chip 50  $\Omega$  differentially terminated, it may be necessary to remove the extra termination at the ADC end when the ADC board is to be plugged to the DMUX board.

Figure 4. Boards without Digital Output Buffers

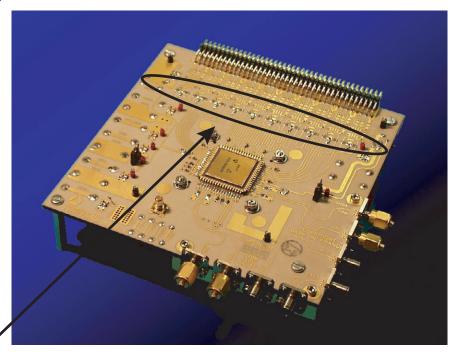

Differential 50 ohm terminations to be removed

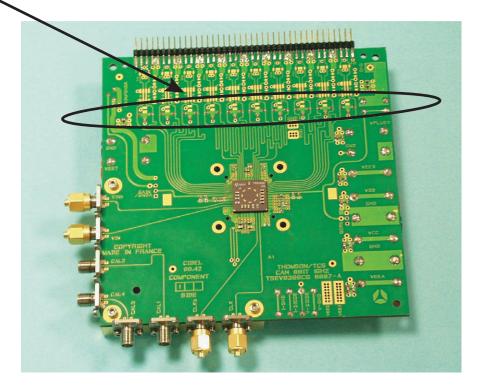







TSEV8388BGLZA2/FZA2 ADC Evaluation Boards with Digital Output Buffers The ADC and DMUX boards can be connected directly to one another with no hardware modification required.

TSEV81102G0TPZR3 DMUX Evaluation Board

It may be necessary to add extra decoupling capacitors at the DMUX output between  $V_{TT}$  and ground: 4 capacitors of 1  $\mu$ F are recommended with 1 capacitor of 15  $\mu$ F.

Figure 5. DMUX Evaluation Board

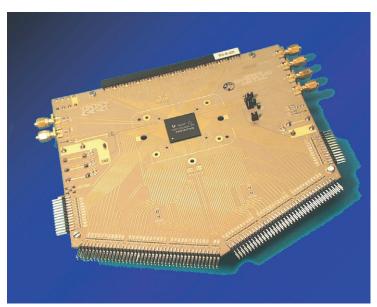

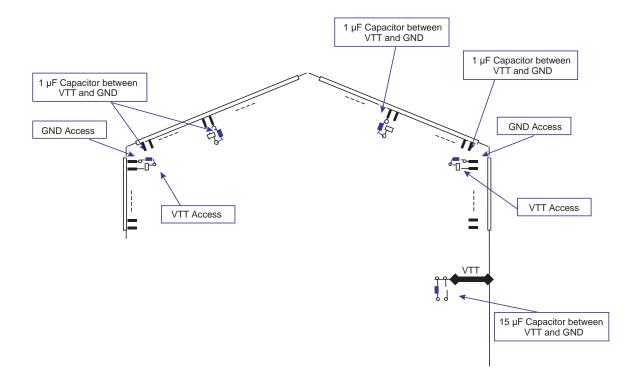

#### Other Settings

- DMUX jumpers<sup>(1)</sup>
  - BIST: jumper OUT (BIST inactive)
  - NBBIT: jumper ON (8-bit)
  - CLKINTYPE: jumper ON (DR/2 mode)
  - RATIOSEL: jumper OUT (for 1:4 ratio)
- Power supplies

#### **ADC**

- $V_{FF} = D_{VFF}$  connected to -5 V supply
- V<sub>CC</sub> connected to 5 V supply
- V<sub>PLUSD</sub> connected to ground
- V<sub>DD</sub> connected to -2 V supply<sup>(2)</sup>
- V<sub>FFT</sub> connected to -5 V supply<sup>(2)</sup>

#### **DMUX**

- V<sub>FF</sub> connected to -5 V supply
- V<sub>CC</sub> connected to 5 V supply
- V<sub>TT</sub> connected to -2 V in ECL mode

All grounds have to be connected together.

- Notes: 1. BIST jumper ON = BIST active NBBIT jumper OUT = 10-bit CLKINTYPE jumper OUT = DR mode RATIOSEL jumper ON = 1:8 ratio
  - 2. The  $V_{DD}$  and  $V_{EET}$  power supplies have to be connected to -2 V and -5 V sources respectively only if the ADC board has the "ZA2" suffix ("with buffer" option).

# Connecting the Logic Analyzer

Once the ADC and DMUX boards are connected and ready for operation, the last step before power up is to connect the logic analyzer probes to the DMUX outputs. It is recommended to have at least one of the DMUX ports fully connected to the logic analyzer in addition to the Data Ready signal from the DMUX, thus providing the synchronization clock for the logic analyzer.

#### **Quick Start**

#### **Power Up Sequence**

- 1. Apply the  $D_{VEE} = V_{EE} = -5 \text{ V}$  power supplies (on both ADC and DMUX)
- Turn on the V<sub>CC</sub> = 5 V power supply (on both ADC and DMUX)
- If applicable ("with buffer" ADC board), supply V<sub>DD</sub> and V<sub>FFT</sub>
- 4. Supply V<sub>TT</sub>
- 5. All grounds have to be connected (as well as V<sub>PLUSD</sub> directly to ground)
- 6. Apply the clock (0 dBm sinusoidal differential clock) and the analog input (-1 dBFS input level)
- 7. Perform an asynchronous reset on the DMUX





The devices should now operate properly. The next section describes the test procedure to be followed so that the whole system works correctly and optimum results are obtained.

#### **Test Procedure**

# **DMUX Output Levels** Setting

This first step is mandatory to match the logic analyzer threshold to the DMUX output levels in both DC and dynamic conditions.

#### **Static Adjustment**

Configuration

ADC and DMUX ON, logic analyzer ON.

The clock and analog input signals are active at the ADC input (the frequency of both signals has no importance but one could choose Fs = 1 Gsps and Fin close to Fs/2 for optimum settings). Perform an asynchronous reset on the DMUX and then release it to make the system operational and re-activate the asynchronous reset to freeze the outputs at their level at reset.

Always choose Fs and Fin so that Fs/Fin = N/M, where N = number of samples (2<sup>n</sup>) andNote: M = number of cycles (must be an odd number).

While the asynchronous reset of the DMUX is active (held high), with a voltmeter measure the VOL and VOH levels of all the output bits of the DMUX and the Vref level of all ports.

Vref should be close to (VOL + VOH)/2. In a typical case, Vref is lower than (VOL + VOH)/2.

The logic analyzer threshold has to be set to the value obtained with (VOL+VOH)/2.

- Notes: 1. The logic analyzer threshold is a very important parameter in a single-ended data acquisition. This is not the case when dealing with differential data acquisition (both Data and DataB are taken into account).
  - 2. It is necessary to calibrate the logic analyzer with all the probes connected prior to the first acquisition.
  - 3. Setting the threshold of the logic analyzer between -1.4 V and -1.6 V should satisfy the conditions for detection of the DMUX output data.

#### **Dynamic Check**

To make sure the previous value for the logic analyzer threshold is correct for both DC and dynamic domains, a dynamic test has to be performed.

- 1. From the last configuration, de-activate the asynchronous reset of the DMUX (the data should then run at the DMUX output).
- 2. With Fs = 1 Gsps and Fin close to Fs/2 (~ 500 MHz in Nyquist conditions), measure the VOL and VOH with an oscilloscope (eye diagram). The Vref value can also be checked with a voltmeter.
- 3. The obtained VOL, VOH and Vref values should be close to the ones found during the previous test. If not, we recommend you re-check the connection between the ADC and the DMUX boards:
- Is the data from the ADC properly sent to the DMUX?
- Perform another asynchronous reset on the DMUX and see what happens.
- Tune the DMUX swing adjust.

- 4. If you still cannot identify the source of your problem:
- · Check the entire system again.
- Take down all your test conditions.

Finally, contact the hotline at hotline-bdc@gfo.atmel.com for support.

 If the output swing (VOH - VOL) is too low for the logic analyzer to detect the DMUX outputs, then the DMUX swing adjust should be used. By tuning the swing adjust, you should be able to obtain satisfying values for VOL, VOH and Vref.

Note: The nominal setting for the swing adjust (SWIADJ = 0 V) of the DMUX should be suitable for a standard HP logic analyzer.

#### **DMUX Delay Adjust**

Once you are sure that the logic analyzer effectively detects the DMUX outputs, the next adjustment is the delay adjust of the DMUX (DMUXDelAdj).

1. Using the same configuration as previously described (Fs = 1 Gsps and Fin close to Fs/2), one can find the right DMUX delay to perform optimum synchronization between the ADC and the DMUX.


For this setting, special care has to be taken with the sampling and input frequencies. In fact, the adjustment on the DMUX delay adjust depends on the sampling frequency. It is not dependent on the input frequency, but the optimum setting for a given sampling frequency is achieved when the Nyquist condition is met, where Fin = Fs/2.

To find the right adjustment between the DMUX and ADC, it is recommended to cover the entire DMUX delay adjust range and check the reconstructed signal obtained for each delay.

The optimum delay is the one which corresponds to a clean reconstructed signal with no glitch (it is possible that a whole range of delays is satisfactory).

In addition, as illustrated in Figure 6, you should not choose a delay too close to an adjustment where the ADC gives poor results.

Figure 6. DMUX Delay Adjust

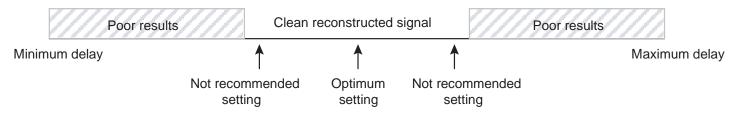






## Logic Analyzer Delay Adjust

If the results are still not satisfactory (glitches on the reconstructed signal), the last adjustment to make is the logic analyzer delay.

- By means of an oscilloscope, the eye diagram with the data and the Data Ready signal should be observed. In theory, the Data Ready signal should be right in the middle of the data but a small amount of skew may have made it shift to the right or left.
- 2. Fine tuning the logic analyzer delay may then be necessary to prop up the Data Ready signal in the middle of the data.

Figure 7. Logic Analyzer Delay Adjust

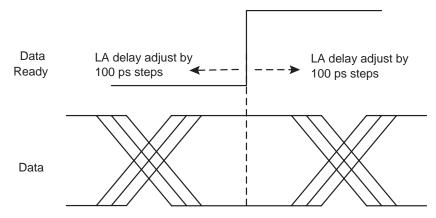

We then recommend you proceed as follows:

- First, by 500 ps steps, change the logic analyzer delay to approximately find the "good" and "bad" zones (this is where the reconstructed signal shows many glitches)
- 4. Second, by 100 ps steps, fine-tune the logic analyzer delay until the reconstructed signal has no glitch and until the test gives satisfying dynamic results.

Typical results you should obtain are:

At Fs = 1 Gsps Fin = 500 MHz (-1 dBFS input level)

SFDR = -52 dBc

THD = -50 dB

SNR = 44 dB

ENOB = 7.0 bits

If you still do not obtain the expected results for the ADC, please contact the hotline for specific technical support at hotline-bdc@gfo.atmel.com



### **Atmel Corporation**

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311

Fax: 1(408) 487-2600

#### **Regional Headquarters**

#### Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland

Tel: (41) 26-426-5555 Fax: (41) 26-426-5500

#### Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong

Tel: (852) 2721-9778 Fax: (852) 2722-1369

#### Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan

Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

#### **Atmel Operations**

#### Memory

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

#### Microcontrollers

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France Tel: (33) 2-40-18-18-18

Fax: (33) 2-40-18-18-18

#### ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France Tel: (33) 4-42-53-60-00

Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland

Tel: (44) 1355-803-000 Fax: (44) 1355-242-743

#### RF/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany Tel: (49) 71-31-67-0 Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom

Avenue de Rochepleine

BP 123

38521 Saint-Egreve Cedex, France

Tel: (33) 4-76-58-30-00 Fax: (33) 4-76-58-34-80

Literature Requests www.atmel.com/literature

**Disclaimer:** Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

© Atmel Corporation 2003. All rights reserved. Atmel® and combinations thereof are the registered trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be the trademarks of others.

